

HOW TO WIRE THE RAIN SENSOR

Wiring the rain sensor is quite simple. Tap into the common wire that connects to both the Valve(s) and the controller. The following diagram will assist you in wiring most common types of sensors.

